
## Mecca Shower Mixer Divertor System Separate Back Plate

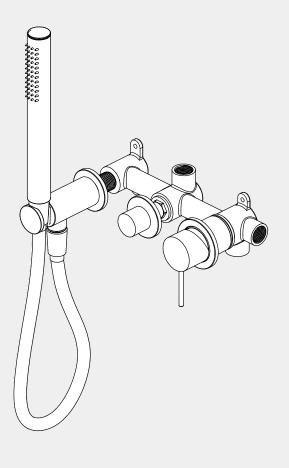







Versions:202401

## Drawing Specifications **Group Item** Watermark License 1x Universal Body 1x Trim Kits Only WM-060073 **Temperature Rating** Min 1°C-Max 75°C **Pressure Rating** Min 150kpa - Max 500kpa Finish & SKU Ø26 Gun Metal Brushed Bronze Brushed Nickel Chrome NR221912fCH NR221912fGM NR221912fBZ NR221912fBN Matte Black Brushed Gold Matte White NR221912fMB NR221912fBG NR221912fMW \*Dimensions are nominal measurements only.


## Installationinstruction For Shower System Trim Kits Only




- 1.Drill a  $\emptyset$ 50mm hole and two 30mm holes into the ceramic tile, then proceed to install the ceramic tile as shown in the diagram above.
- 2. Remove the water testing plug




3.Put gauge onto the outlet as above picture. And cut off remaining thread using the provided gauge as a guide.

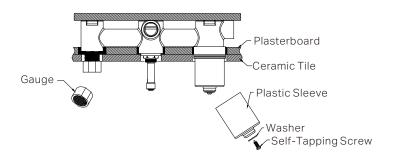

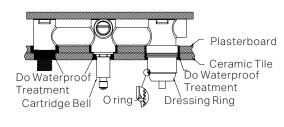



- 4.Remove the gauge, self-tapping screw, washer, and plastic sleeve in sequence.
- 5.Insert the O ring to the dressing bell groove, and slide the dressing bell onto cartridge.
- 6. Apply waterproof treatment to the three areas indicated in the diagram above.
- 7. Tighten up the dressing ring on the cartridge bell, and slide divertor cartridge bell onto the cartridge.




- $8. Apply thread sealant or Teflon tape to the outlet thread, \\ then use a wrench to tighten the outlet onto it.$
- 9. Install the plate, washer, and bracket onto the outlet body in the order shown above.


## Installationinstruction For Shower System Trim Kits Only

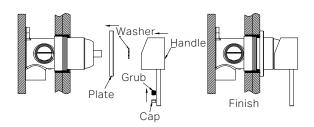




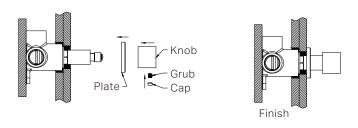

11. Slide plate onto body, position the diverter knob, tighten it with a grub screw using an Allen key, and cap the grub screw hole.

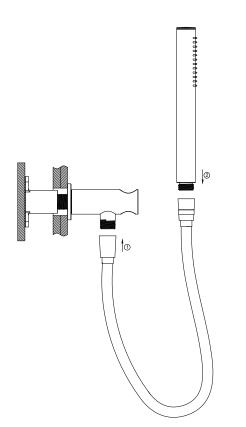

12. Connect the hand shower to the bracket with the hose.

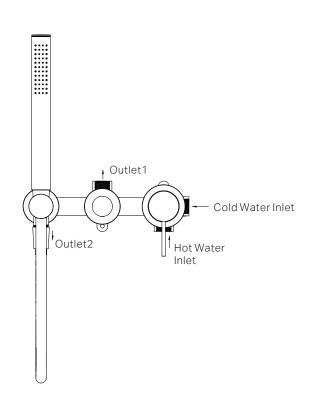

13.TEST & CHECK FOR LEAKS.





