
# Mecca Shower Mixer Divertor System Separate Back Plate Trim Kits Only

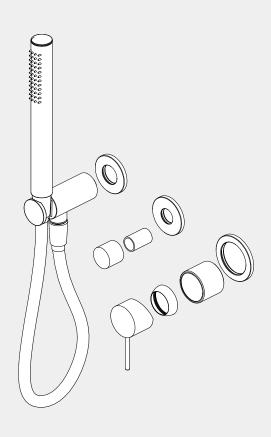

Packaging Includes



Versions:202401

Drawing


## Watermark License 3x Plates 1x Handle WM-060073 1x Cartridge Bell **Temperature Rating** 1x Dressing Ring Min 1°C-Max 75°C 1x Hand Shower 1x Hose Pressure Rating 1x Bracket Ø 26 Min 150kpa - Max 500kpa 1x Knob 1x Sleeve Finish & SKU Brushed Bronze Brushed Nickel Gun Metal Chrome NR221912ftCH NR221912ftGM NR221912ftBZ NR221912ftBN Matte Black **Brushed Gold** Matte White NR221912ftMB NR221912ftBG NR221912ftMW

Specifications


 $Mecca\,Shower\,Mixer\,Divertor\,System\,Separate\,Back\,Plate\,Trim\,Kits\,Only\,-Manual\,Argentian$ 

# $Mecca\,Shower\,Mixer\,Divertor\,System\,Separate\,Back\,Plate\,Trim\,Kits\,Only\,-Manual\,Argential Separate\,Back\,Plate\,Plate\,Back\,Plate\,Plat$


## Installationinstruction For Shower System Trim Kits Only

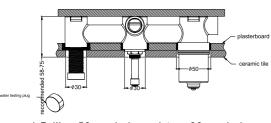


1.Drill a 50mm hole and two 30mm holes into the ceramic tile, then proceed to install the ceramic tile as shown in the diagram above.

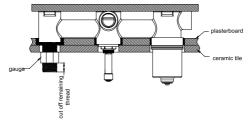


3.Put gauge onto the outlet as above picture. And cut off remaining thread using

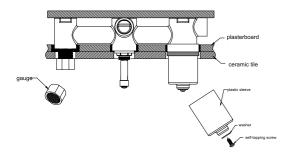



4. Remove the gauge, self-tapping screw, washer, and plastic sleeve in sequence.

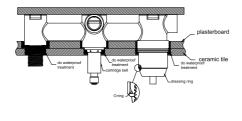

- 5.Insert the O ring to the dressing bell groove, and slide the dressing bell onto cartridge.
- 6. Apply waterproof treatment to the three areas indicated in the diagram above.









8. Apply thread sealant or Teflon tape to the outlet thread, then use a wrench to tighten the outlet onto it.

9. Install the plate, washer, and bracket onto the outlet body in the order shown above.


## Installationinstruction For Shower System Trim Kits Only

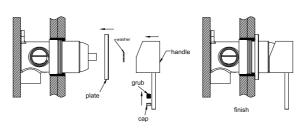


10. Slide plate onto body, attach the washer to the cartridge, position the handle, tighten it with a grub screw using an Allen key, and cap the grub screw hole.

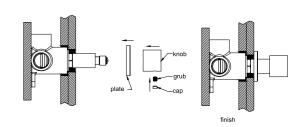

11. Slide plate onto body, position the diverter knob, tighten it with a grub screw using an Allen key, and cap the grub screw hole.

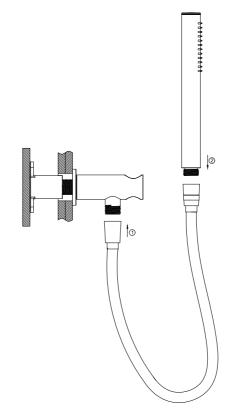

12. Connect the hand shower to the bracket with the hose.

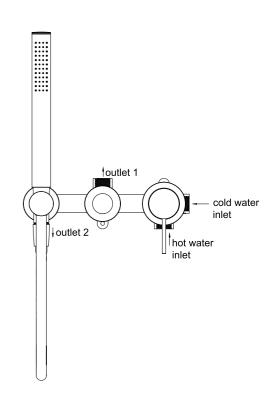

13.TEST & CHECK FOR LEAKS.

# Nero

