

## 40mm Bath Pop-Up Plug With Removable Waste No Overflow


## **Nero**

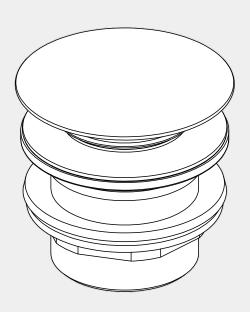


Versions:202405

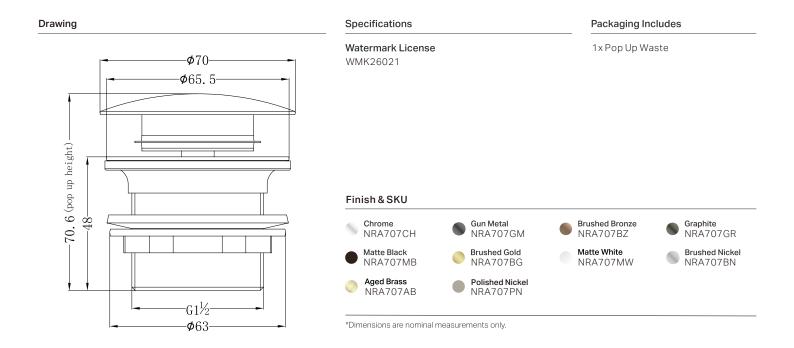


## Installation Instruction

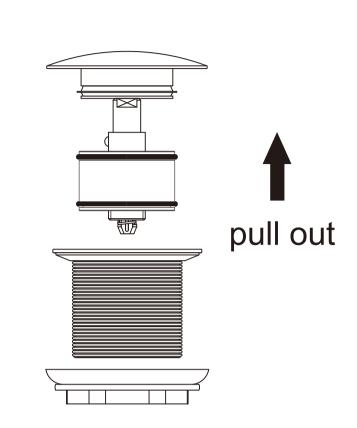


1. Disassemble pop -up waste by pulling out the cap.

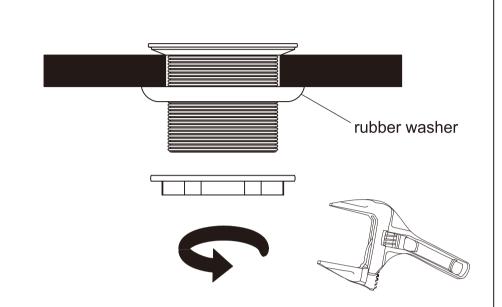

2. Put the thread pipe through the bath hole. Fit the rubber washer and tighten up the nut on thread pipe by screw driver.

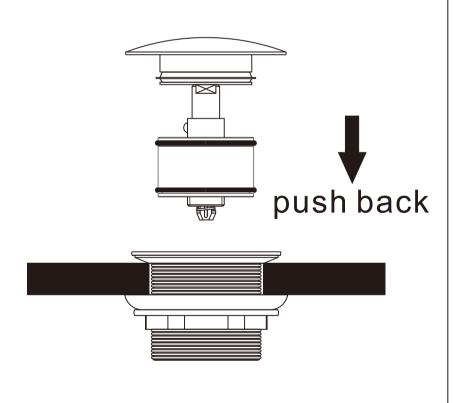

3. Push back the cap.

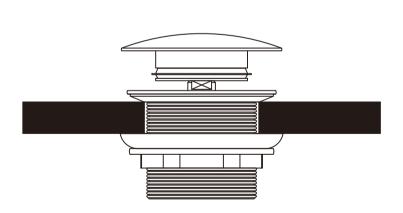

4. Finish, and check for leaks.

www.nerotapware.com.au



